

# External Displays Quick Start Guide




This guide explains how to connect 1-sided and 2-sided external displays to your ProNote<sup>®</sup> 1.5 and ProNote<sup>®</sup> 330 bill counter supplied by Cashmaster.

---

For more information please scan the QR code or visit our website: [cashmaster.com](http://cashmaster.com)



# Connecting your external display

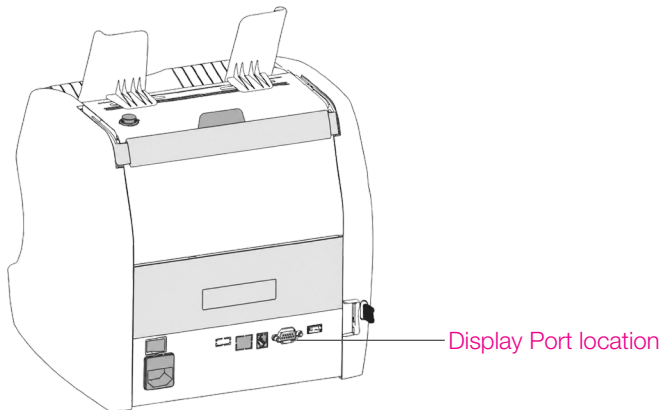

- Unbox the display and remove the packaging and protective cover.
- Check that your ProNote device is turned off, and turn off / disconnect the power from the mains socket.
- Connect the plug to the External Display port on the back of the ProNote money counter.
- Screw the securing posts on the plug into the money counter to prevent the plug coming loose.
- Position the display in the preferred position on your counter, and arrange the cable neatly.
- Reconnect the power to your money counter and turn the device on.

# Configuring the display type

Follow the steps below to configure your ProNote device to operate correctly with your external display:

1. Press and hold the Start / Clear button for approximately 5 seconds until it asks for a password.
2. Enter the password '1' and press the MENU dial.
3. Rotate the MENU dial to select system option and press the dial to select.
4. Rotate the MENU dial to select external display and press the dial to select.
5. Rotate the MENU dial to select the display type:
  - Single sided: WX-116
  - Double sided: WX-115
6. Press the MENU dial to save the settings.
7. Restart your ProNote money counter by switching off and on again.



WX-116



WX-115

---

## Using your external display

- The display will automatically show the counted item quantity and value.
- To reset the total on the display, press the Start / Clear button on your ProNote money counter.

