
# Cashmaster™ StoreOne

For more help please scan the above QR code or visit our website.
cashmaster.com

## Cashmaster StoreOne Quick Start Guide



## What's in the box?

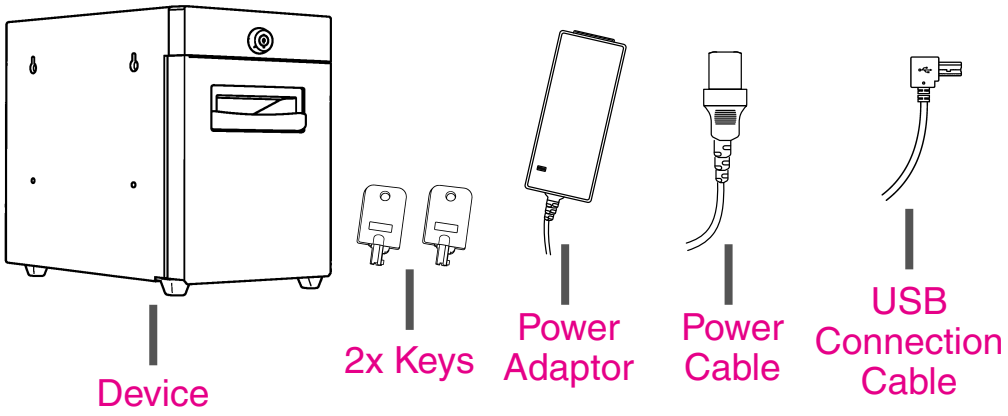


## Safety and using StoreOne

- Do not disassemble this product. Incorrect re-assembly can cause electric shock.
- Before turning on the power, please make sure that there are no objects obstructing the operation of the belts and sensors.
- Unplug this product from the mains outlet before opening the internal note acceptor.
- Do not open cash box until it has been completely removed from machine.

## Setting up your StoreOne device

- Cashmaster StoreOne requires professional installation and must be connected to a computer system running the Cashmaster Listener Application for StoreOne.
- Please refer to the separate installation instructions, or your installation partner for assistance.

## Daily Operation

- Present banknotes individually into the note entry slot.
- Accepted notes are stored automatically in the cash box.
- Rejected notes are returned to the operator for review.

**Note**: Never force folded, damaged or wet notes into the validator.



# LED Indicators and Troubleshooting



- **Green:** Device ready for operation.
  Flashing green: Note processing in progress.
- **Yellow**: Operator attention required. Indicates cash box is nearing capacity.
- **Red**: Device fault, suspect note, damanged note, or note jam issue requiring intervention. Refer to the error message displayed in the computer application for more information.

# Cash Box Removal and Cash Collection

- Only authorised personnel should remove the cash box.
- Press red latch button down whilst ensuring the cash box door is closed, slide the cash box towards you to remove.
- Inspect the cash box for damage before reinserting it.
- Reinsertion is the reverse of the removal process.
- Ensure the cash box is correctly seated before returning the device to service.
- Close/lock the door and verify the bezel turns green.



# Care and Maintenance

- Regular cleaning and maintenance is required to maintain reliable operation and product warranty validity. See cleaning guide.
- Do not use solvents, aerosol or abrasive cleaners.
- Inspect cables regularly for signs of damage.
- Only trained personnel should perform service procedures beyond basic cleaning and jam removal.

# Technical Specification

- Dimensions: 163 x 335 x 245 mm
- Cash Box Capacity: 300 notes
- Connectivity: USB
- Supported Currencies: Configured for market-specific currency
- Installation: Countertop or under-counter deployment
- Environment: +5°C to +50°C, 5% to 95% RH




# Support

For technical support, servicing, software updates and warranty information, contact your local Cashmaster representative or visit the Cashmaster website.



cashmaster.com

UK Office t: +44 01383 416098 enquiries@cashmaster.com
US Office t: +1 877 227 4627 inquiriesusa@cashmaster.com
DE Office t: +49 2433 308 9800 germany@cashmaster.com